

**Safety**



**WARNING!**

**Electric shock hazard.**


**Installation must be performed by a licensed electrician and conform to all national and local electrical codes.**

**Disconnect electrical power at the fuse or circuit breaker before installation.**


**Do not alter or modify the fixture.**

**Prepare Fixture**

1. Disconnect electrical power at the fuse or circuit breaker for the circuit where fixture is installed.
2. Remove screws **(A)** as shown and remove cover **(B)**.

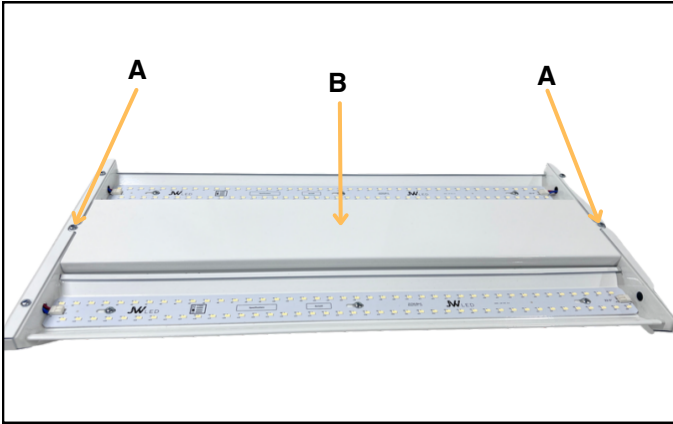


3. With the cover off, locate the wiring connections **(C)** on either side of the driver, as well as the two screws **(D)** securing it.

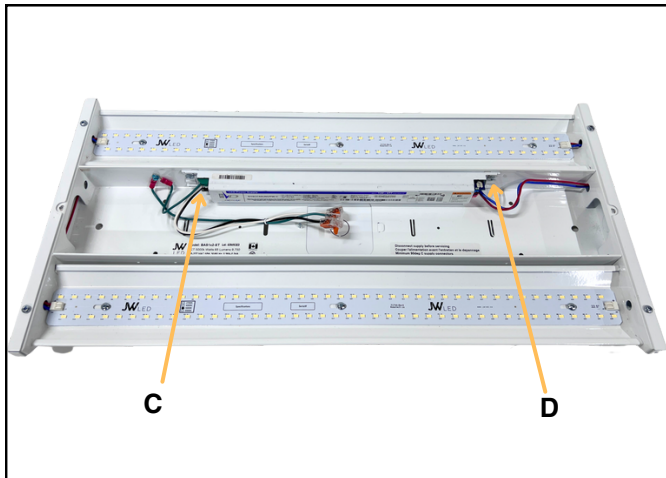


**Driver Removal Instructions**

1. To disconnect the wires from the driver, find the small release buttons **(F)** located on the top of the connection points.

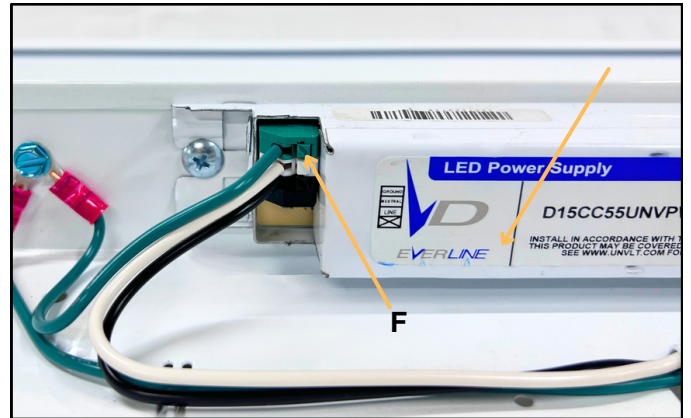

2. Using a small tool, gently push the release buttons **(F)** while holding the wire. This will disengage the wire from the driver socket, allowing removal.

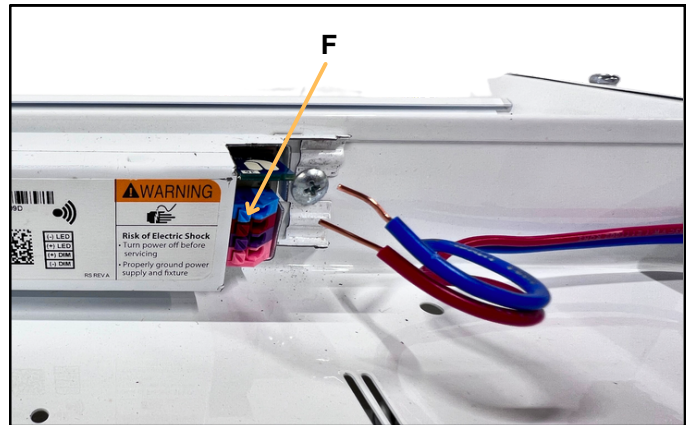



3. Once the buttons are pressed, gently pull all of the wires away from the driver to fully disconnect them. Take note of the wire locations for easier reinstallation later.

continued on next page..

# Driver Replacement Installation Guide

## Driver Removal Instructions


- Once you have verified that all wires are disconnected from the driver, remove screws (**G**) on both ends of the driver. Now, you can proceed with the installation of the new LED Driver.

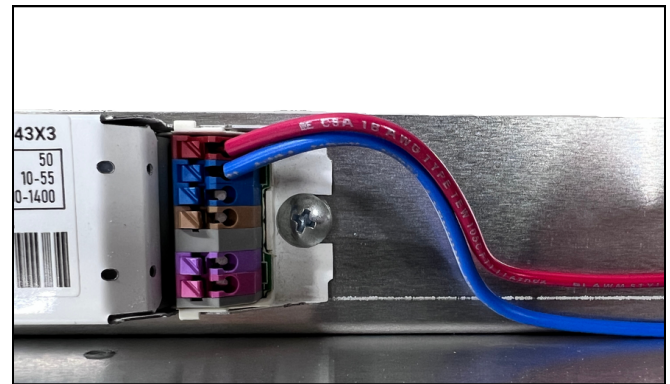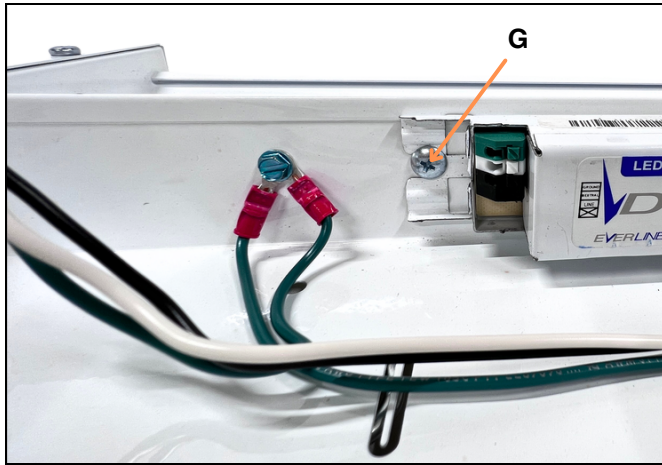

Positive > Positive  
Negative > Negative

## Driver Installation Instructions

- Secure the new driver by screwing it in the same manner it was removed, maintaining the same ground positioning.
- Before wiring the new driver, inspect driver diagram (**H**) and wire accordingly.

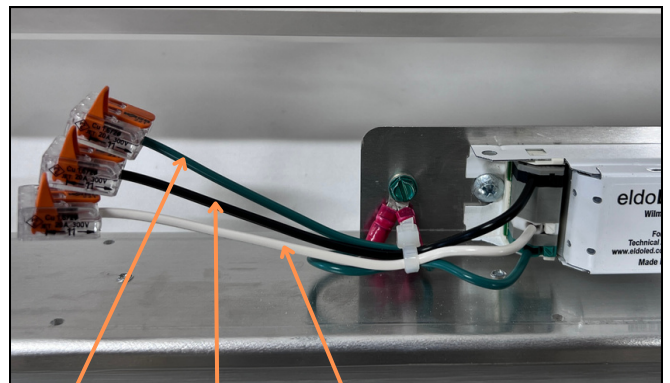

Ground Line Neutral

- Confirm all wires are firmly connected to their respective spots. Test light to ensure functional operation.

