

Safety



WARNING!

Electric shock hazard.


Installation must be performed by a licensed electrician and conform to all national and local electrical codes.

Disconnect electrical power at the fuse or circuit breaker before installation.


Do not alter or modify the fixture.

Prepare Fixture

1. Disconnect electrical power at the fuse or circuit breaker for the circuit where fixture will be installed.
2. Open all clips (A) as shown and remove cover (B).

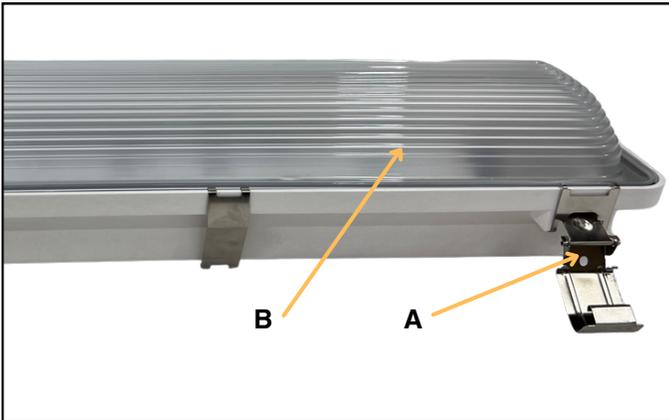

3. Squeeze clips (C) inward and remove LED mounting plate (D) from housing. Mounting plate is tethered to housing. Do not remove tether.

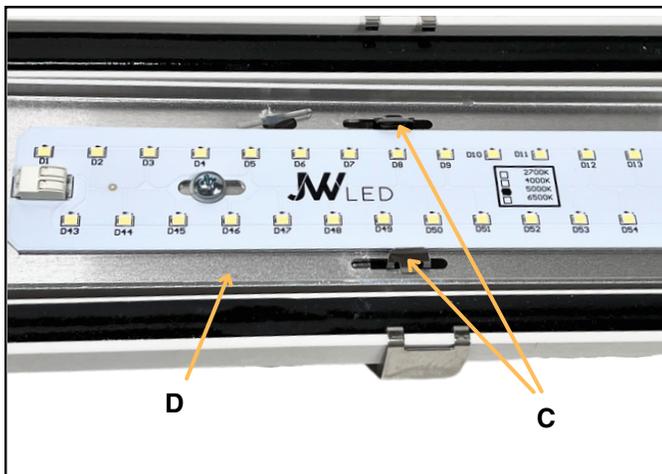


Driver Removal Instructions

1. Flip over LED mounting plate to reveal the LED Driver (E).



2. On both ends of the driver, locate the wiring connections on the LED boards and ground. To disconnect the wires from the driver, find the small release buttons located on the top of the connection points (F).

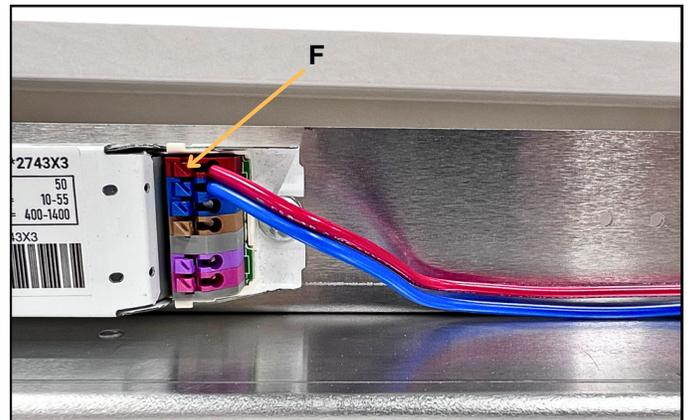


3. Using a small tool, gently push the release buttons (F) while holding the wire. This will disengage the wire from the driver socket, allowing removal.
4. Once the buttons are pressed, gently pull all of the wires away from the driver to fully disconnect them. Take note of the wire locations for easier reinstallation later.

continued on next page..

Driver Replacement Installation Guide


Driver Removal Instructions

- Once you have verified that all wires are disconnected from the driver, remove screws **(G)** on both ends of the driver. Now, you can proceed with the installation of the new LED Driver.



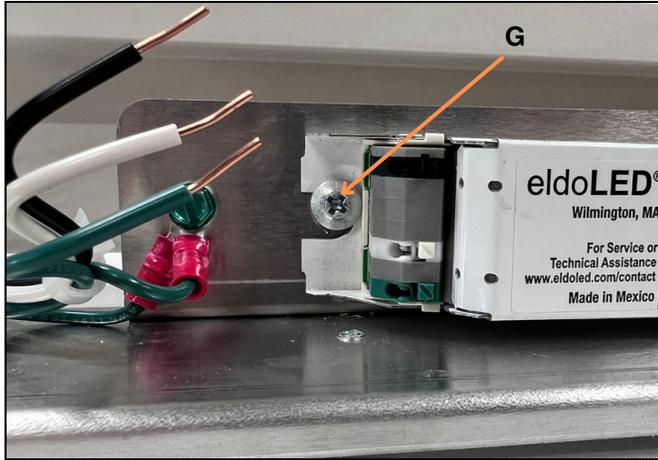


Driver Installation Instructions

- Secure the new driver by screwing it in the same manner it was removed, maintaining the same ground positioning. See photos 1 & 2.

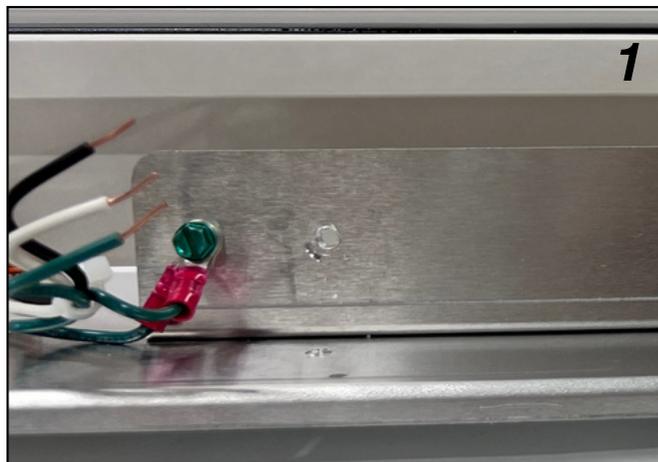

- Before wiring the new driver, inspect driver diagram **(H)** and wire accordingly.

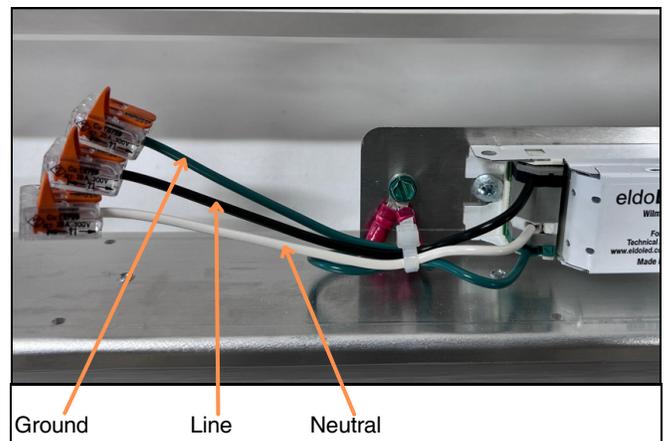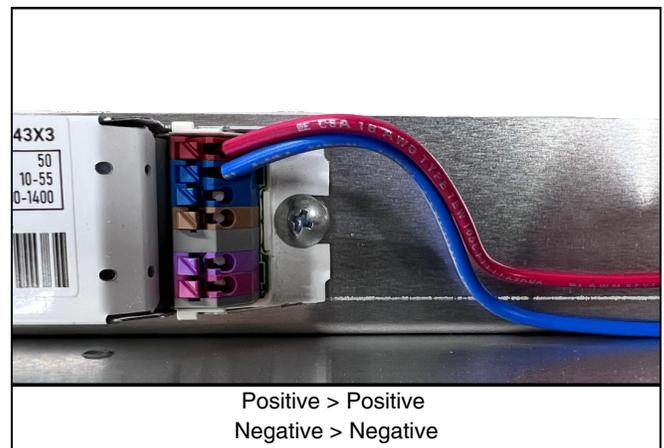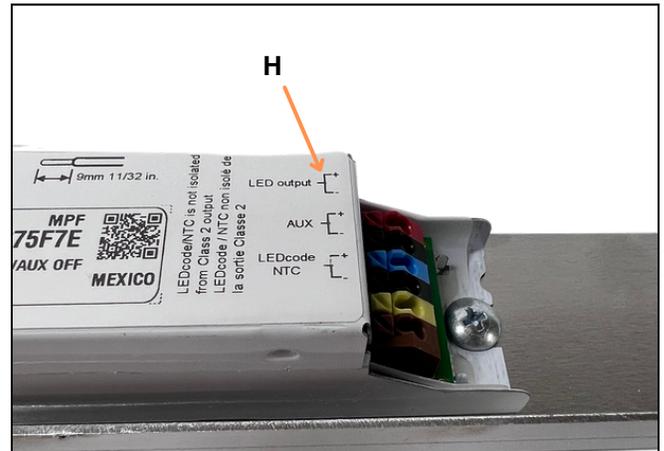

- Confirm all wires are firmly connected to their respective spots. Test light to ensure functional operation.